

BAFFLE INSTALLATION INSTRUCTIONS:


1. INSTALL BOTH INTAKE AND EXHAUST SIDES OF BAFFLE ON FRONT POSTS OF ENCLOSURE
2. BOTH BAFFLES MUST BE ALIGNED VERTICALLY AT THE SAME RU PLACEMENT OF EQUIPMENT
 - THE **LEFT** SIDE BAFFLE IS THE **EXHAUST** SIDE (CLOSED FACE TOWARD THE FRONT OF ENCLOSURE)
 - THE **RIGHT** SIDE BAFFLE IS THE **INTAKE** SIDE (CLOSED FACE TOWARD THE REAR OF ENCLOSURE)
3. EXHAUST BAFFLE (LEFT SIDE):
 - A. SLIDE EXHAUST BAFFLE ASSEMBLY INTO ENCLOSURE AT DESIRED RU TO THE LEFT OF YOUR SWITCH
 - B. USE QTY. 2 PLASTIC RIVETS TO ATTACH THE **CLOSED** FACE OF THE BAFFLE TO THE **FRONT, OUTSIDE** OF THE FRONT VERTICAL POST
4. INTAKE BAFFLE (RIGHT SIDE):
 - A. SEE 4,A : ADJUSTABLE REAR COVER INSTALL, ABOVE
 - B. SLIDE INTAKE BAFFLE ASSEMBLY INTO ENCLOSURE AT DESIRED RU TO THE RIGHT OF YOUR SWITCH
 - C. USE QTY. 4 PLASTIC RIVETS TO ATTACH THE **OPEN** SIDE OF BAFFLE TO THE **FRONT** AND **SIDE** OF THE FRONT VERTICAL POST
 - D. AFTER BAFFLE IS SECURED IN CORRECT LOCATON, REACH INTO INTAKE OF BAFFLE FROM FRONT AND SLIDE ADJUSTABLE REAR COVER TO BACK ACCOMDATE FOR THE DEPTH OF YOUR SPECIFIC SWITCH
 - E. TIGHTEN BOTH WING NUTS TO SECURE ADJUSTABLE REAR COVER
5. INSTALL TOP /BOTTOM COVERS ON BOTH SIDES:
 - A. ALIGN TOP/BOTTOM COVER SECTION BEHIND FRONT POSTS AND USE 3 PLASTIC RIVETS TO ATTACH
 - INSTALL QTY. 1 PLASTIC RIVET INTO REAR(INSIDE) FACE OF VERTICAL POST
 - INSTALL QTY. 2 PLASTIC RIVETS INTO TOP/BOTTOM FACE OF BAFFLE PER SECTION
 - B. WHEN INSTALLING, NOTE REMOVEABLE NOTCHES REAR OF COVERS. COVERS MAY NEED TO BE NOTCHED TO ACCOMDATE FOR YOUR SPECIFIC REAR RAIL PLACEMENT
 - C. REPEAT STEP A IN ON THE TOP AND BOTTOM, FOR BOTH INTAKE AND EXHAUST BAFFLES

** NOTE: IF DESIRED RU IS WITHIN THE BOTTOM 3 RU OF THE ENCLOSURE, BOTTOM COVERS MAY NEED TO BE RESTING IN LOCATION PRIOR TO MAIN INTAKE/ EXHAUST BAFFLE BEING INSTALLED

EXHAUST BAFFLE , LEFT SIDE:
BAFFLE ORIENTED WITH
CLOSED FACE TOWARD
FRONT OF ENCLOSURE

4, A: ADJUSTABLE REAR COVER, INTAKE ASSEMBLY
- PRIOR TO INSTALLING INTAKE BAFFLE INTO RACK, INSTALL
ADJUSTABLE REAR COVER **LOOSELY** OVER STUDS ON INSIDE
OF INTAKE MAIN BAFFLE BODY
- INSTALL BRUSH ONTO ADJUSTABLE REAR COVER

** NOTE: IF DESIRED MOUNTING RU LIES WITHIN THE 23rd RU (FROM
BOTTOM) THE BRUSH MAY NEED TO BE NOTCHED TO ACCOUNT
FOR MIDDLE RAIL SUPPORT HORIZONTAL. TRIM AS NECESSARY.

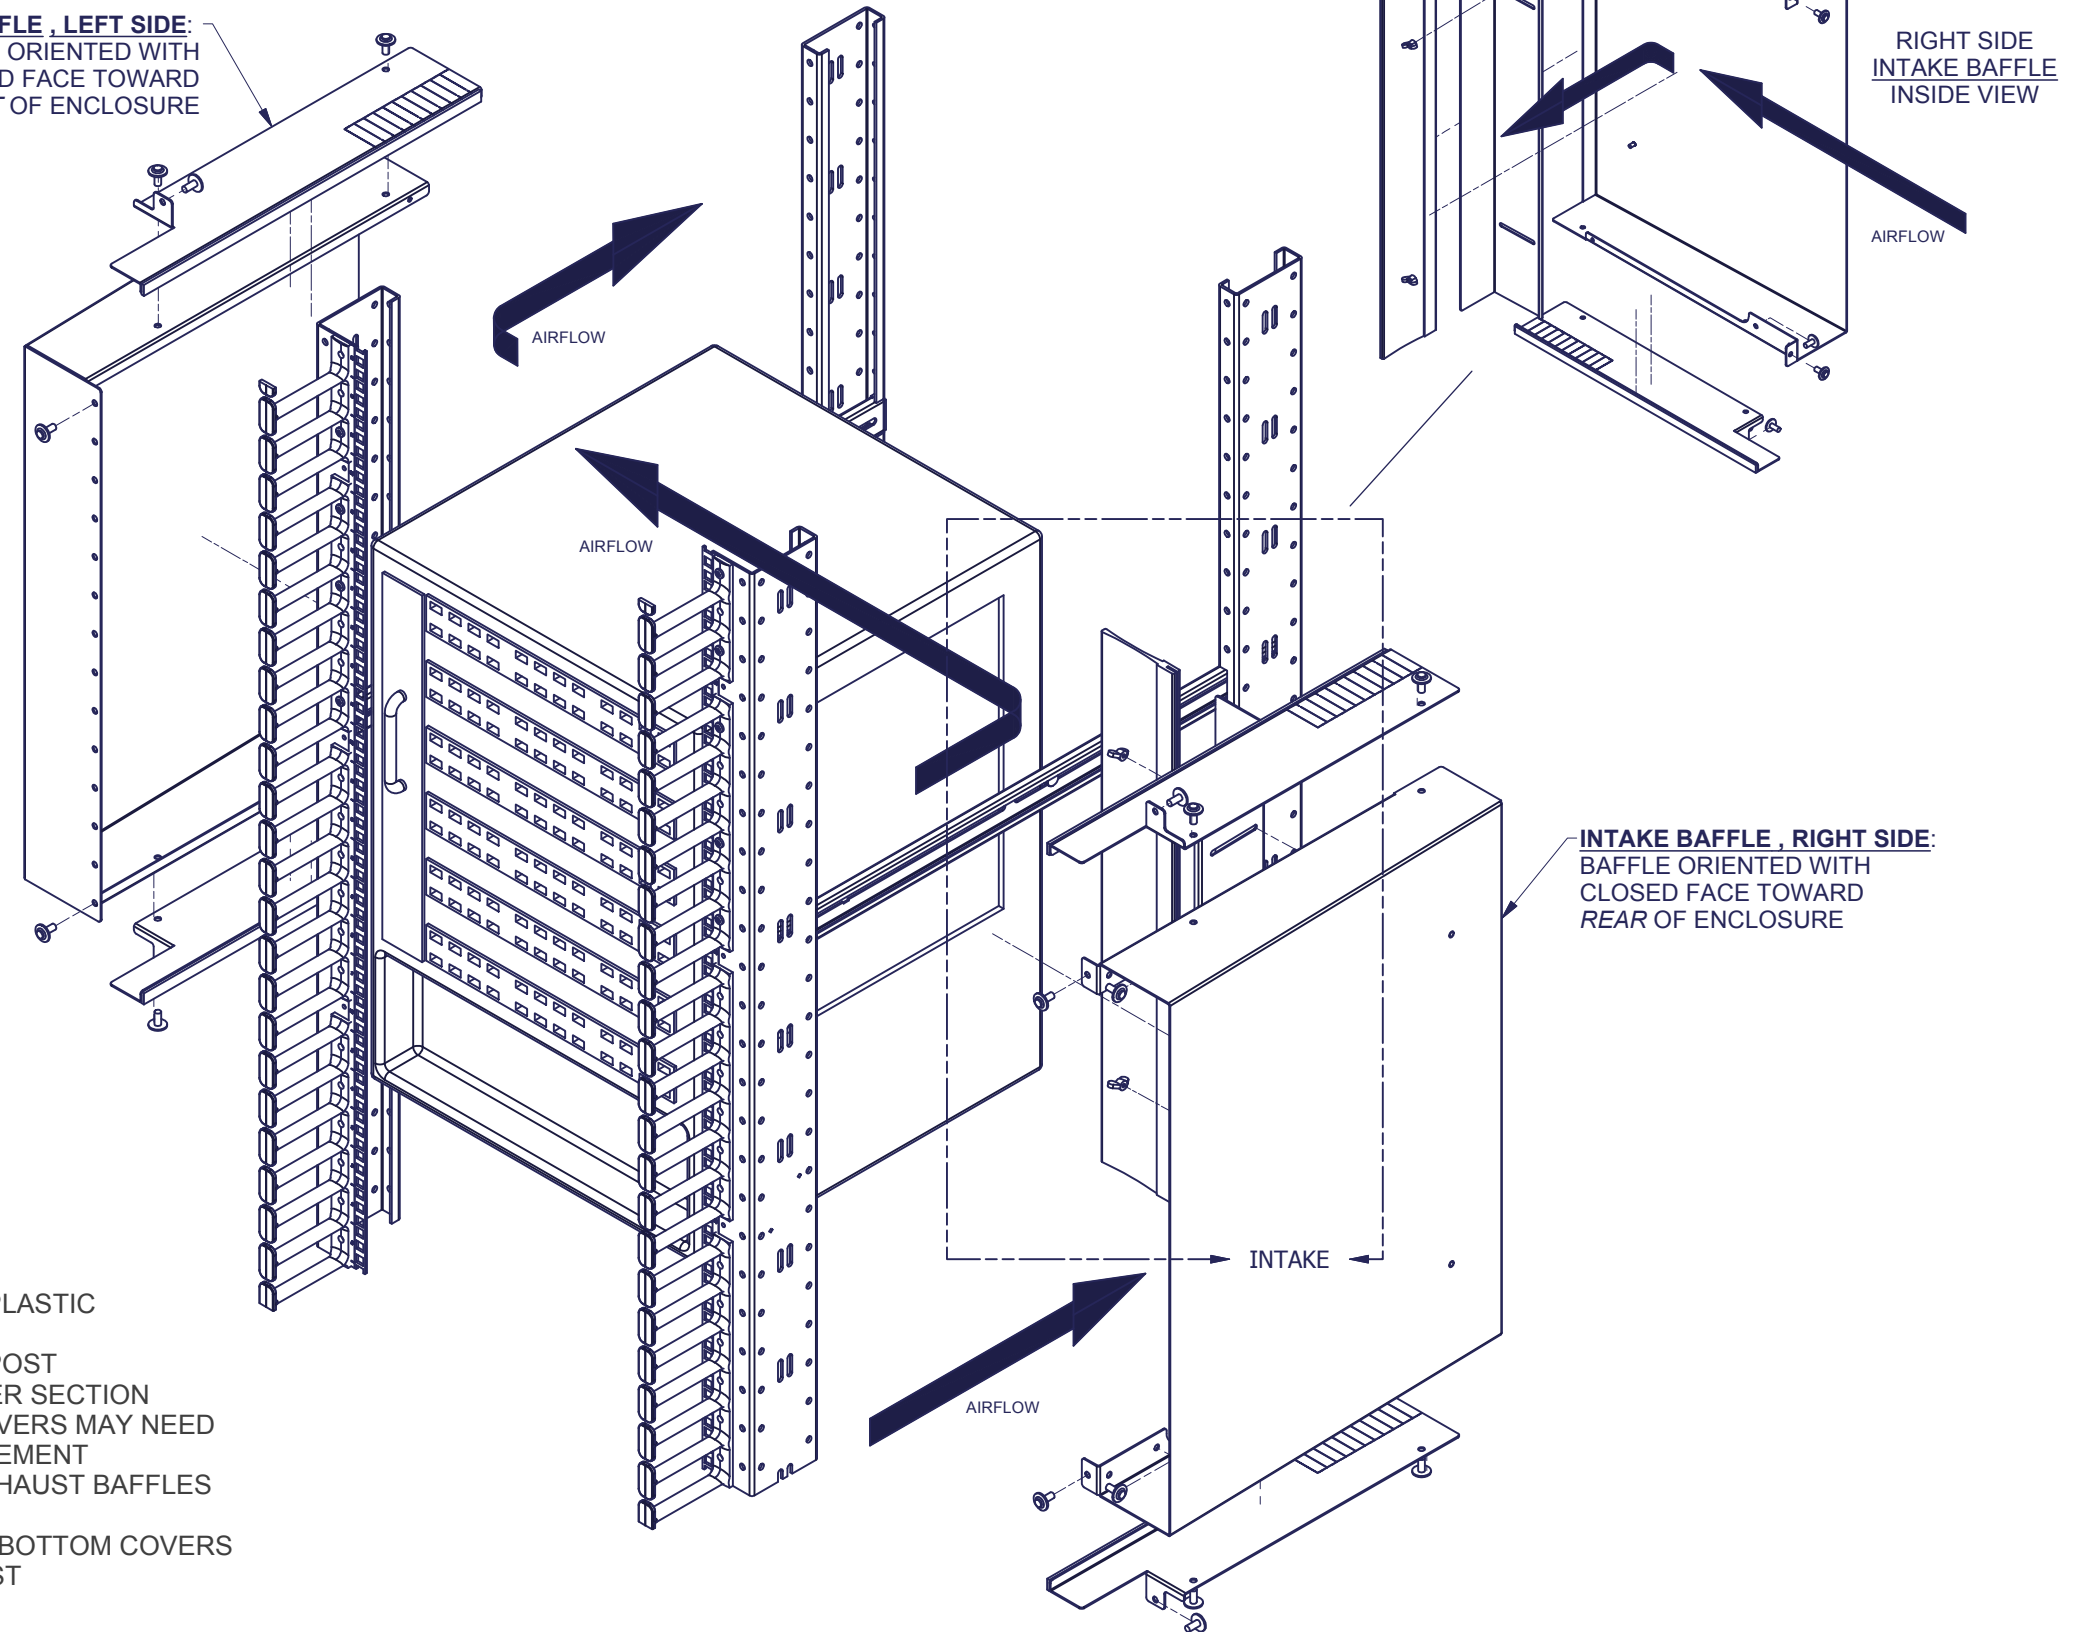

**RIGHT SIDE
INTAKE BAFFLE
INSIDE VIEW**

INTAKE BAFFLE , RIGHT SIDE:
BAFFLE ORIENTED WITH
CLOSED FACE TOWARD
REAR OF ENCLOSURE

INTAKE

AIRFLOW

AIRFLOW

AIRFLOW